

# FLEX SERIES GLASS MEASURING GUIDE

Phone Number: (269) 488-2752



Phone: (269) 488-2752

01/2024

### Flex Series Glass Measuring Guide

 This measuring guide applies to all Flex Series glass measuring situations.

### **General Notes for Measuring Glass**

- All glass MUST be measured per the glass measuring guide. Make sure to measure for the correct situation for each piece of glass.
- When submitting dimensions make sure to submit final measurements.
   The final measurements include the additions and/or the subtractions to the measurements taken.
- Record all dimensions on the provided Glass Order Form.
  - When labeling the glass it is required to use the Partition number as part of the label. Example: P1-1, P1-2, P2-1, etc.
  - When recording the dimensions make sure the dimensions are legible. An electronic copy of the Glass Order Form is available on our website in the "Nxtwall Installation Resources" location.
- If there are any questions when measuring for glass contact Nxtwall.

### **Glass Delivery**

- On the Glass Order Form include the delivery location, contact name, and phone number.
- When ordering glass the delivery method will need to be selected.
   There are two delivery options:
  - Loose: Quickest lead time. Glass will be delivered via route truck.
     Delivery times are non-guaranteed, a time frame will be provided (i.e. delivery between 8am-10am).
  - Crated: Longer lead times. Glass to be delivered via LTL or Private Truck. Must have ability to unload crate (i.e. forklift/loading dock).
- Approximate glass lead times are 7-10 business days from the date of the glass order.

### **Receiving Glass and Inspection**

- When the glass is received the receiver is responsible for confirming the quantity received is correct and the dimensions are correct.
- The receiver will be responsible for reporting any damaged or defective glass. Glass defects are subject to the ASTM Glass Standards.
- Any glass issues must be reported within three business days of the glass delivery. Any reports outside of the three business days may be subject to additional fees.




Phone: (269) 488-2752

01/2024

## Flex Series Glass Measuring: Glass Width Measurement


 Vertical Flex Stud to Vertical Flex Stud

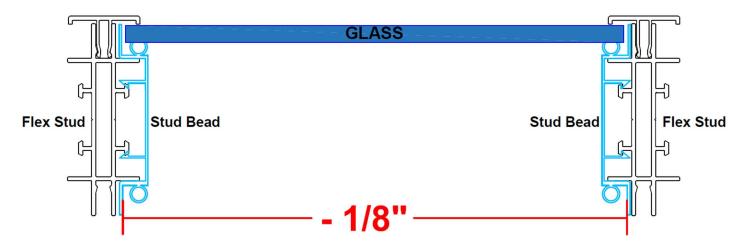

### **Glass Width Measurement:**

Stud Bead to Stud Bead Subtract 1/8"

\*\*Measurement Location Shown Above\*\*

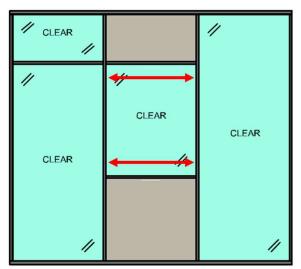

\*Measuring situation as shown on elevation\*

- The width measurement is the same for all measuring situations.
- Measure the width at multiple locations within the opening to verify width.
  - The widths should be the same at the top and bottom of the opening.





Phone: (269) 488-2752

01/2024

# Flex Series Glass Measuring: Glass Height Measurement

 Horizontal Flex Stud to Horizontal Flex Stud

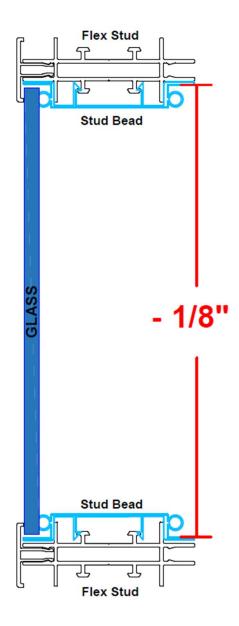

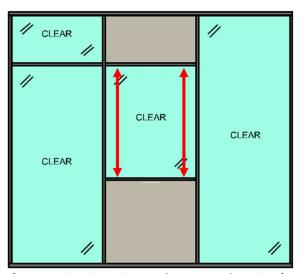

\*Measuring situation as shown on elevation\*

### Measurement Notes:

- Measure the height at multiple locations within the opening to verify height.
  - The height should be the same on each side of the opening.

**Glass Height Measurement:** 

Stud Bead to Stud Bead Subtract 1/8"




Phone: (269) 488-2752

01/2024

# Flex Series Glass Measuring: Glass Height Measurement


 Flex Track at the Floor to Horizontal Flex Stud

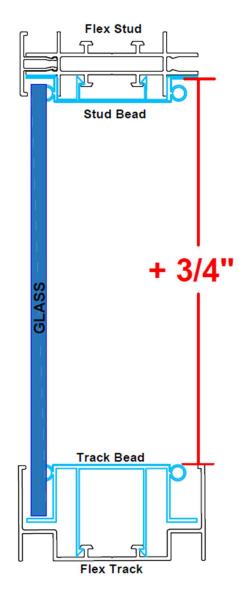

### **Glass Height Measurement:**

Top of Flex Track to Stud Bead Add 3/4"

\*\*Measurement Location Shown\*\*

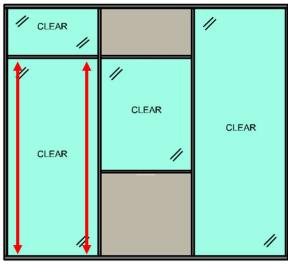

\*Measuring situation as shown on elevation\*

- Measure the height at multiple locations within the opening to verify height.
  - The height should be the same on each side of the opening.
  - If there is a variance in height due to an uneven floor use the shortest measurement for the opening.






Phone: (269) 488-2752

01/2024


Flex Series Glass Measuring: Glass Height Measurement - Clerestory

 Horizontal Flex Stud to Flex Track at the Ceiling

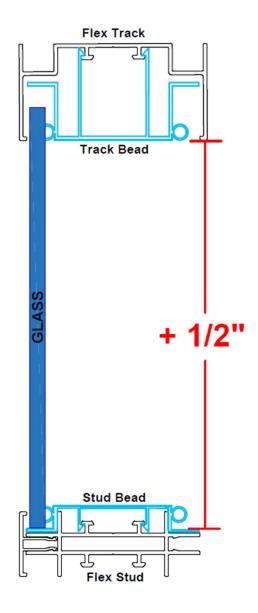

Glass Height Measurement: Stud Bead to Bottom of Flex Track Add 1/2"

\*\*Measurement Location Shown\*\*

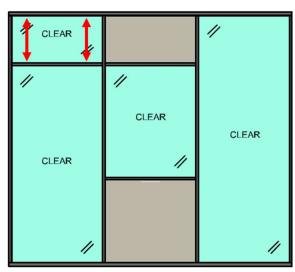

\*Measuring situation as shown on elevation\*

- Measure the height at multiple locations within the opening to verify height.
  - The height should be the same on each side of the opening.
  - If there is a variance in height due to an uneven ceiling use the shortest measurement for the opening.




Phone: (269) 488-2752

01/2024

Flex Series Glass Measuring: Glass Height Measurement – Full Height Glass


 Flex Track at the Floor to Flex Track at the Ceiling

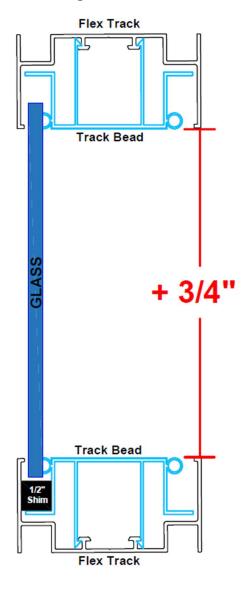

### **Glass Height Measurement:**

Top of Flex Track to Bottom of Flex Track Add 3/4"

\*\*Measurement Location Shown\*\*

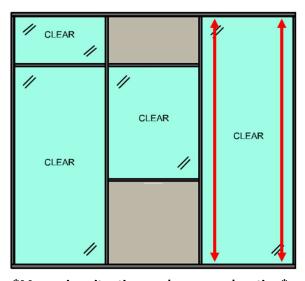

\*Measuring situation as shown on elevation\*


- Measure the height at multiple locations within the opening to verify height.
  - The height should be the same on each side of the opening.
  - If there is a variance in height due to an uneven floor use the shortest measurement for the opening.
- When installing the glass make sure to include the 1/2" Shim in the Flex Track at the Floor.



Phone: (269) 488-2752

01/2024


Flex Series Glass Measuring: Single Glass Swing Door – Width Measurement

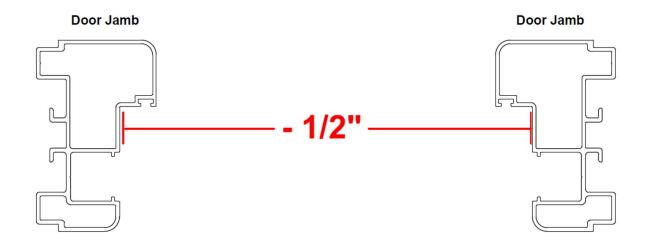

### **Single Glass Swing Door Width Measurement:**

Door Jamb to Door Jamb Subtract 1/2"

\*\*Measurement Location Shown\*\*

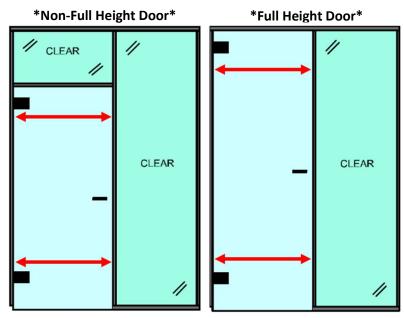

\*Measuring situation as shown on elevation\*


- Measure the width at multiple locations within the opening to verify width.
  - The width must be the same from top to bottom to ensure proper fitment.
- For standard Single Swing Doors the width is typically 35 1/2" or 35 5/8".
- The width measurement location is the same for Full Height Swing Doors.



Phone: (269) 488-2752

01/2024


Flex Series Glass Measuring: Glass Swing Door – Height Measurement

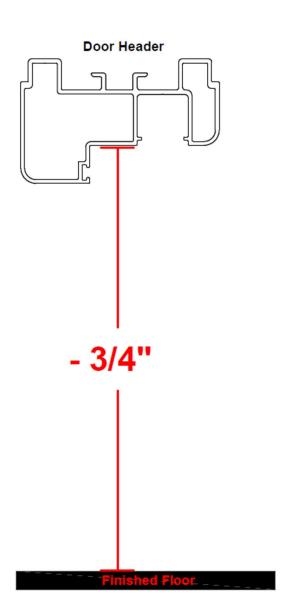




\*\*Measurement Location Shown\*\*

\*Non-Full Height Door\*

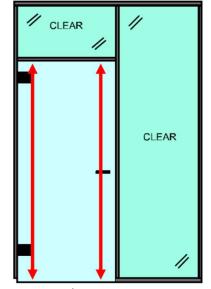

\*Full Height Door\*

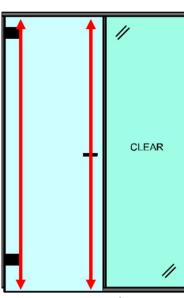

\*Measuring situation as shown on elevation\*

- Measure the height on each side of the opening to verify height.
  - Use the shortest measurement for the door height.
- The height measurement location is the same for Full Height Swing Doors.
- The height measurement calculation allows a 1/2" air gap at the floor and a 1/4" air gap between the top of the door and door header.






Phone: (269) 488-2752

01/2024

Flex Series Glass Measuring: Double Glass Swing Door – Width Measurement

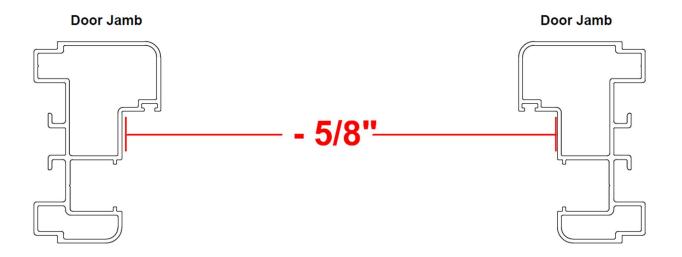


### **Double Glass Swing Door Width Measurement:**

**Door Jamb to Door Jamb Subtract 5/8"** 

\*Divide Measurement by 2 for Individual Door Width\*

\*\*Measurement Location Shown\*\*

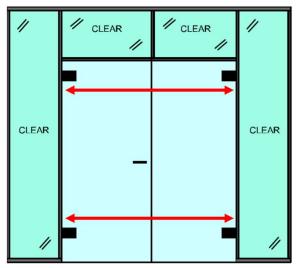

\*Measuring situation as shown on elevation\*

- Measure the width at multiple locations within the opening to verify width.
  - The width must be the same from top to bottom to ensure proper fitment.
- The width measurement location is the same for Full Height Swing Doors.




Phone: (269) 488-2752

01/2024

CLEAR

Flex Series Glass Measuring: Double Glass Swing Door – Height Measurement

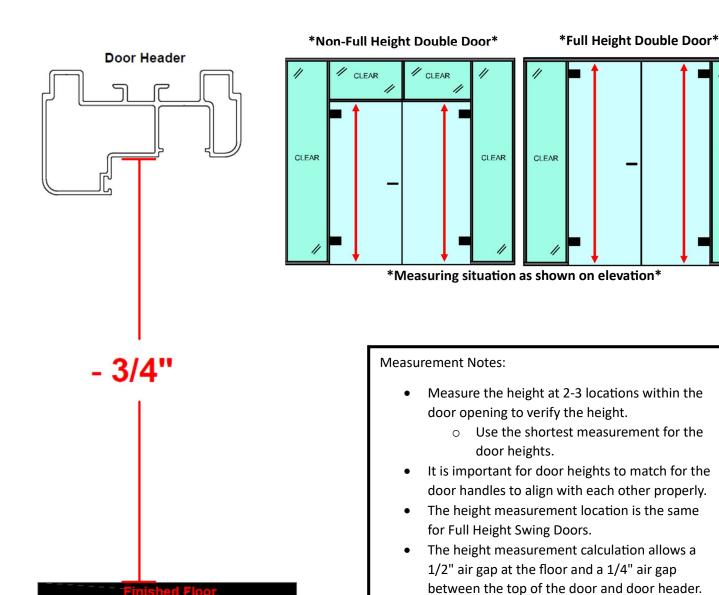

### **Glass Swing Door Height Measurement:**

Finished Floor to Door Header Subtract 3/4"




Phone: (269) 488-2752


01/2024

Flex Series Glass Measuring: Non-Full Height Single Glass Sliding Door

- Height Measurement

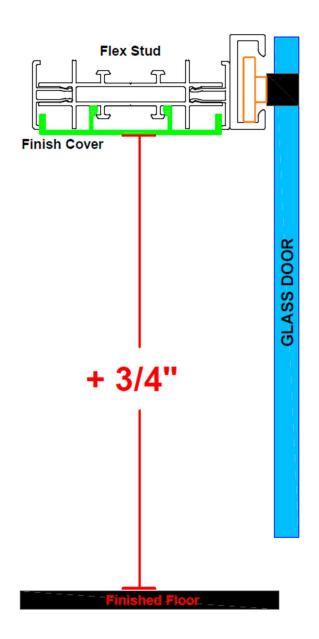

### \*Non-Full Height Sliding Door\*

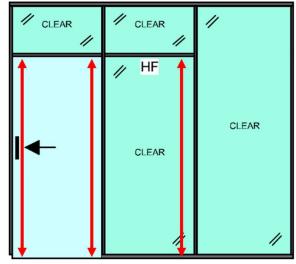

\*Measuring situation as shown on elevation\*

### Measurement Notes:

- Measure the height at 2-3 locations along the door opening to verify the height.
  - Use the shortest measurement for the door height. This will ensure the door does not contact the floor when opening and closing.
- With a 38" walkthrough opening the standard width for Sliding Glass Doors is 42".

**Glass Sliding Door Height Measurement:** 


Finished Floor to Finish Cover Add 3/4"



Phone: (269) 488-2752

01/2024

Flex Series Glass Measuring: Full Height Single Glass Sliding Door – Height Measurement

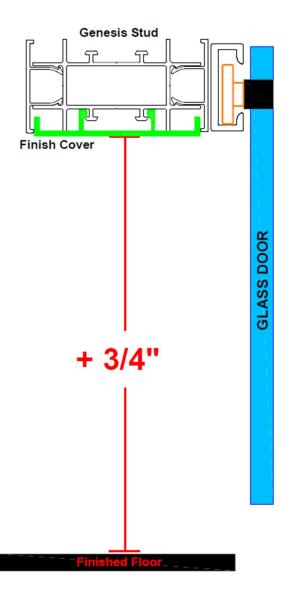

# \*Full Height Sliding Door\* CLEAR CLEAR

\*Measuring situation as shown on elevation\*

### Measurement Notes:

- Measure the height at 2-3 locations along the door opening to verify the height.
  - Use the shortest measurement for the door height. This will ensure the door does not contact the floor when opening and closing.
- With a 38" walkthrough opening the standard width for Sliding Glass Doors is 42".

Full Height Glass Sliding Door Height Measurement:

Finished Floor to Finish Cover Add 3/4"




Phone: (269) 488-2752


01/2024

Flex Series Glass Measuring: Non-Full Height Double Glass Sliding Door

- Height Measurement

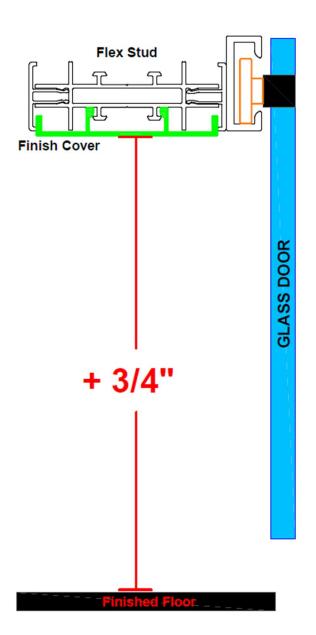

### \*Non-Full Height Double Sliding Door\*

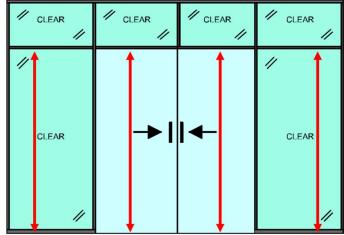

\*Measuring situation as shown on elevation\*

### Measurement Notes:

- Measure the height at 3-4 locations within the door opening to verify the height.
  - Use the shortest measurement for the door heights. This will ensure the doors do not contact the floor when opening and closing.
- It is important for door heights to match for the door handles to align with each other properly.
- Each door width will be 42".

**Glass Sliding Door Height Measurement:** 


Finished Floor to Finish Cover Add 3/4"



Phone: (269) 488-2752

01/2024

Flex Series Glass Measuring: Full Height Double Glass Sliding Door – Height Measurement

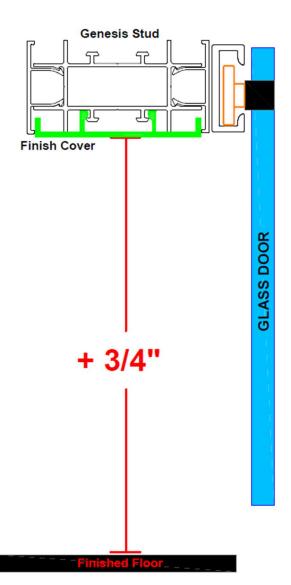

# \*Full Height Double Sliding Door\* CLEAR CLEAR

\*Measuring situation as shown on elevation\*

### Measurement Notes:

- Measure the height at 3-4 locations within the door opening to verify the height.
  - Use the shortest measurement for the door heights. This will ensure the doors do not contact the floor when opening and closing.
- It is important for door heights to match for the door handles to align with each other properly.
- Each door width will be 42".

Full Height Glass Sliding Door Height Measurement:

Finished Floor to Finish Cover Add 3/4"